




# Application Procedure Pedestal Marker


Pedestal Markers are made from a highly visible plastic, alerting snow removal and outside plant personnel to the exact location of your pedestals. They are installed to the pedestal in minutes.

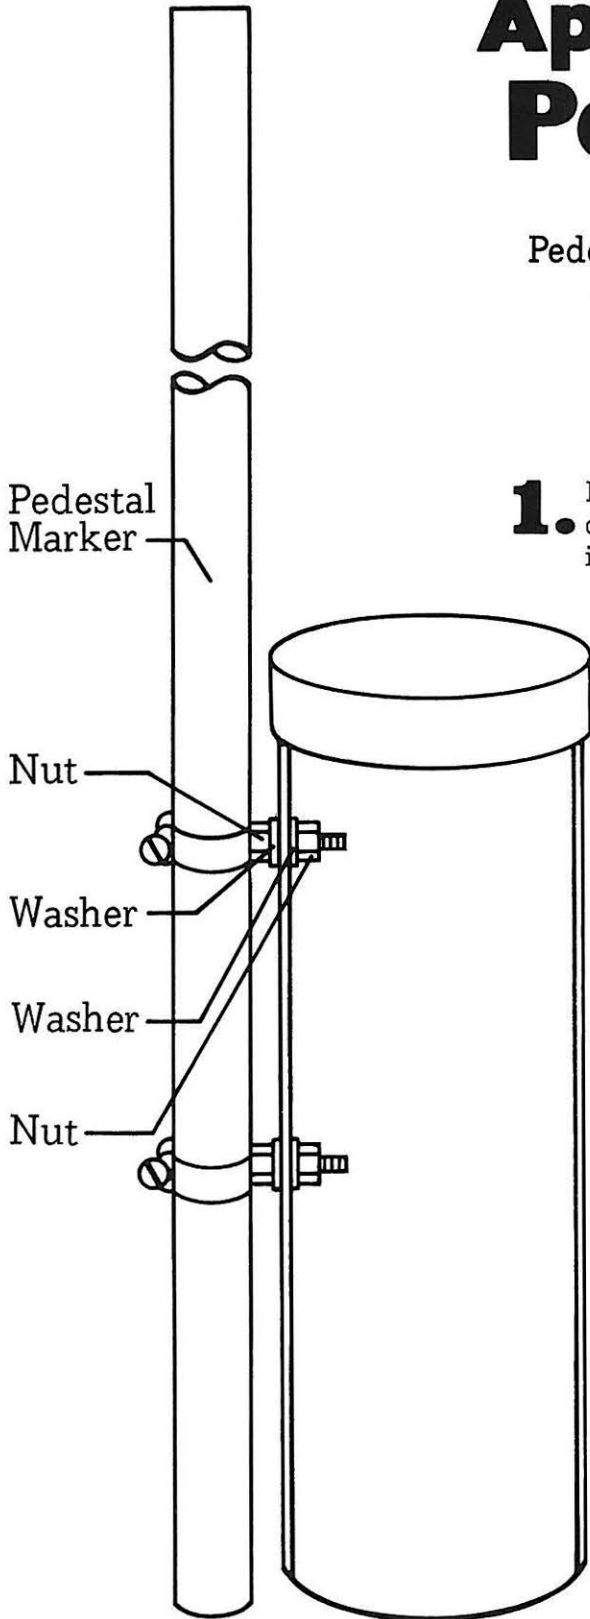

**1.** Remove knock-out plugs or drill two holes, if necessary, in the pedestal.

**2.** The special hose clamps that come with the marker are then installed in pedestal holes.  
PLP NOTE—For correct installation, a nut and washer should secure clamp on both the inside and outside wall of pedestal.

## Hose Clamps

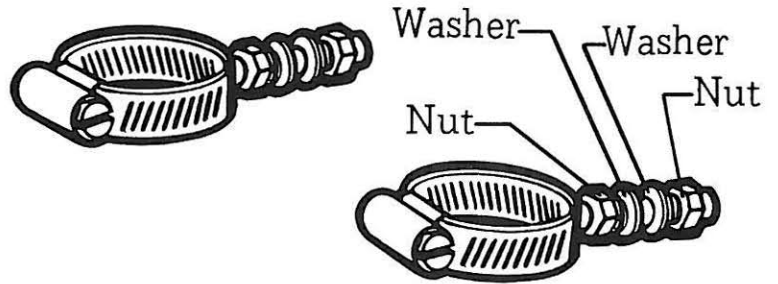

**3.** The marker is then slid through the hose clamps to the desired location.

**4.** The marker is then secured by tightening the bolt on the clamp.

Copyright 1980 Preformed Line Products Company All Rights Reserved